


Installation & Operating Instructions

FuelBoost Model 220 Fuel Pump Controller

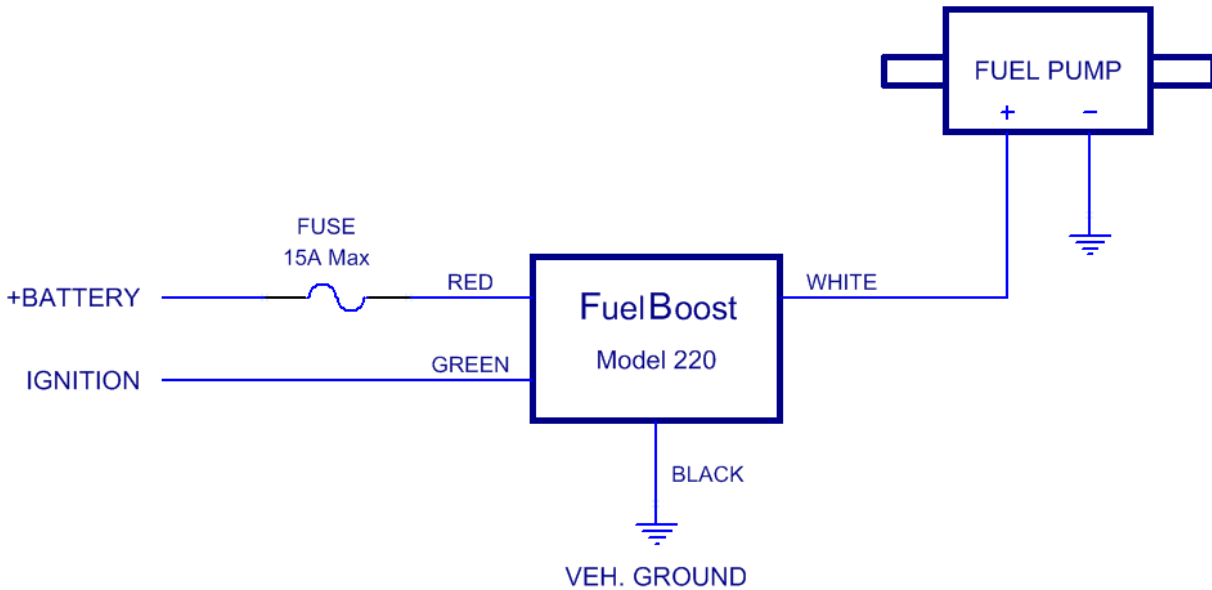

Installation

Wire the FuelBoost Model 220 Fuel Pump Controller as shown in the diagram.

Note: Connect the green wire (IGNITION) to a circuit that remains energized (hot) when the key switch is in the START position (engine cranking). Do not connect the green wire to an ACCESSORY circuit (such as the radio) that drops out when the key switch is in the START position. On many classic cars and trucks, the positive (+) terminal of the ignition coil is a good place to connect to the ignition circuit.

Operation

- When the ignition is first switched on, the fuel pump will run for up to 25 seconds or until the engine starts.
- After the ignition is switched off, the fuel pump is disabled (locked out) for 6 hours.
- To override the 6 hour lockout at any time, switch the ignition off and on 3 times in 3 seconds.